INSTALLATION INSTRUCTION FOR 4322-577

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER .
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

READ AND SAVE THESE INSTRUCTIONS

ASSEMBLING THE FIXTURE (Fig. 2)

1. Shut off the power at the circuit breaker and remove the old fixture, including the mounting hardware.
2. Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration.
3. Thread the center column assembly (K) onto the coupling (L).
4. Secure the part (II) of the decorative arms (N) to the coupling (Q) with the screws (P), and then adjust the column (M) to the correct height, then secure the part (I) of the decorative arms (N) to the column (M) with the screws (O).
5. Attach the diffuser (T) onto the base (S) with the washer (V) and the screws (U).
6. Thread the nut (X) onto the nipple (Y), then thread the nipple (Y) into the coupling (W) and tighten with the nut (X).
7. Install the light bulb(s) in accordance with the fixture's specifications **(DO NOT EXCEED THE SPECIFIED WATTAGE!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).**
8. Slide the glass (Z), plastic washer (A1) and iron washer (B1) over the nipple (Y) and secure with the nut (C1).
9. Slide the cap (D1) over the nipple (Y), and secure with the finial (E1).

HANGING THE FIXTURE (Fig. 1)

10. Thread the nipple (E) into the ceiling loop (H) until snug.
11. Thread the hex nut (D) onto the nipple (E). Place the lock washer (C) over end of the nipple (E).
12. Thread other end of the nipple (E) with loop (H) into crossbar (A) until snug.
13. Take this crossbar (A) assembly and mount to ceiling junction box with the mounting screws (B) (Size:#8-32*0.6"L). The side of the mounting plate marked "GND" must face out.
14. Using proper chain pliers open one link of chain (I) and connect it to the fixture loop (J).
15. By measuring, determine connect number of links needed for desired hanging height.
16. Lace the fixture wires through the chain links. Slip screw collar ring (G) and canopy (F) over the chain.
17. Open one link of the other end of the chain (I) and connect it to the ceiling loop (H).
18. Feed the fixture wires through the ceiling loop (H) and nipple (E) and pull until taut.

CONNECTING THE WIRES (Fig. 3)

19. At this point, connect the electrical wires as shown in Fig. 3, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper) connect fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate using the green screw provided. After the wires are connected, tuck them carefully inside the junction box.
20. Raise the canopy (F) all the way to the ceiling. Raise the screw collar ring (G) and thread onto ceiling loop (H) protruding through canopy (F). (Fig.1)

Your installation is now complete. Return the power to the junction box and test the fixture.

Fig.2

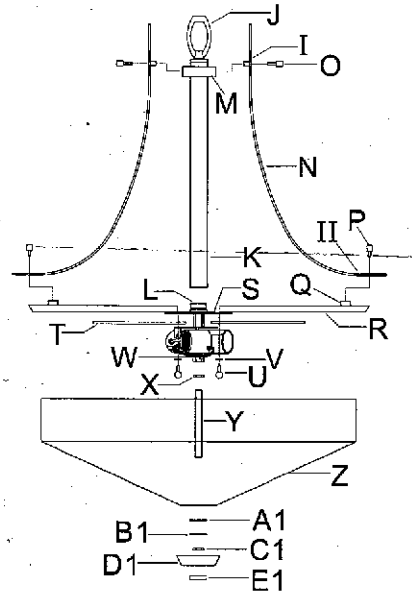

Fig.1

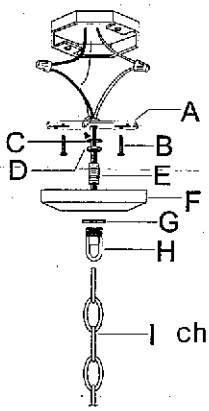

Set# A–016
-Crossbar
-Ground screw
-Mounting screw*2

I chain# HCH2072-577
(3.8mm)

Fig.3

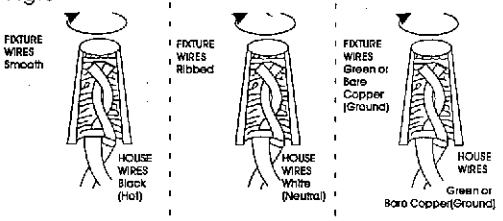

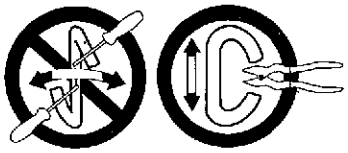

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.